



## **DO THIS BEFORE USING PUMP**

### **RE-PRIMING THE PUMP**

Pumps very rarely need to be primed (you would have primed your pump for the first time after receiving it). In the event of the pump becoming defused, however, follow these steps for the re-priming:

- A) Remove pump from the tank base – check the oil level of the pump and fill to the maximum recommended level if necessary.
- B) Place the pump on comfortable working height surface. Press the “start” button
- C) While the pump is in working phase, place a small measure of oil (10ml) in the aspiration filter.
- D) Return the pump body in to the tank, immersing the pump in the oil.
- E) Activate the pump to verify the re-priming was successful.
- F) If the pump is not yet operational, repeat.